



Install the drip edge at the eave of the shed roof. Then, install the roofing underlayment on the roof, making sure it laps 12" up the adjoining wall. Fasten the roofing underlayment with button cap nails. Install the drip edge at the rake of the roof on top of the roofing underlayment.

Pro Tip! In a cold climate, install an ice and water shield 36" up from the eave.

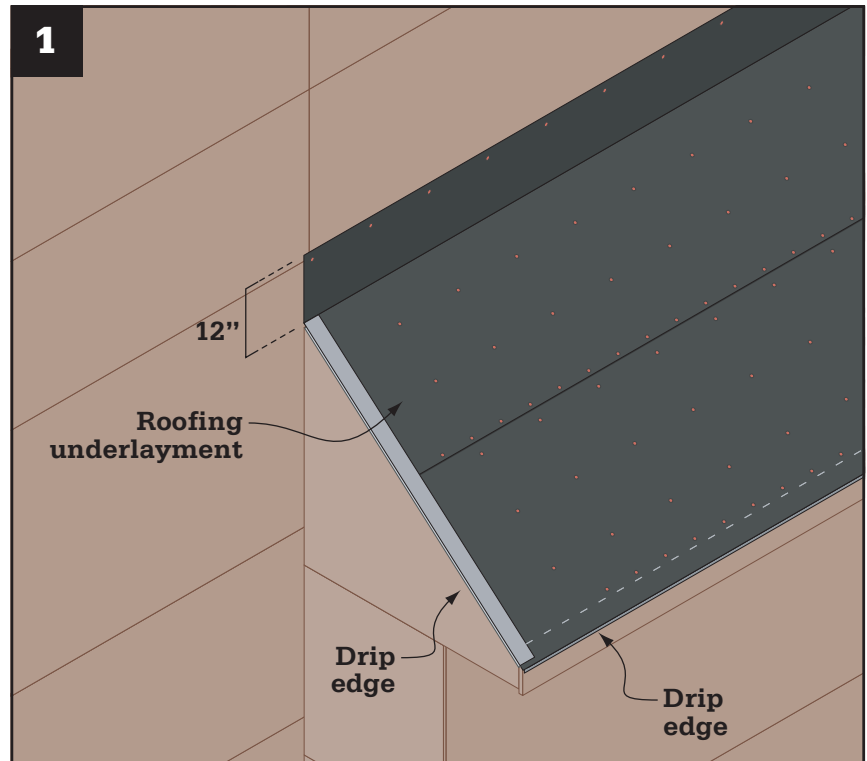


NOTES _____

Install the shingles. Then, apply a bead of roofing mastic along the shingles 3" from the roof-to-wall intersection.

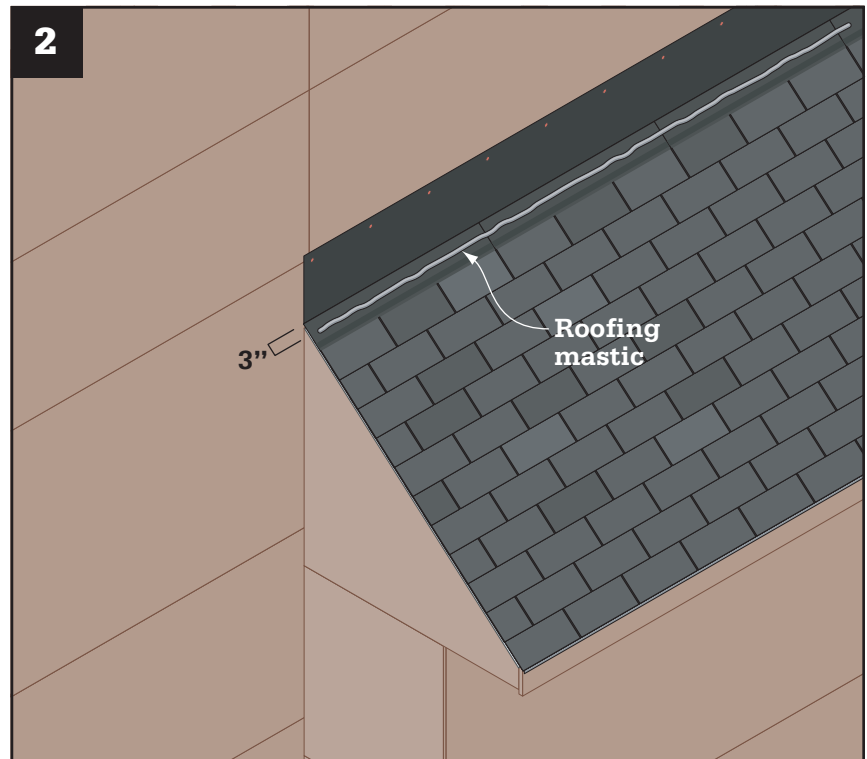


Install apron flashing at the roof-to-wall intersection, extending it 1" beyond the rake of the roof. Install the housewrap, covering 3" of the vertical face of the apron flashing.

Pro Tip! *Overlap all housewrap seams 6". Seal seams with 3" construction tape.*

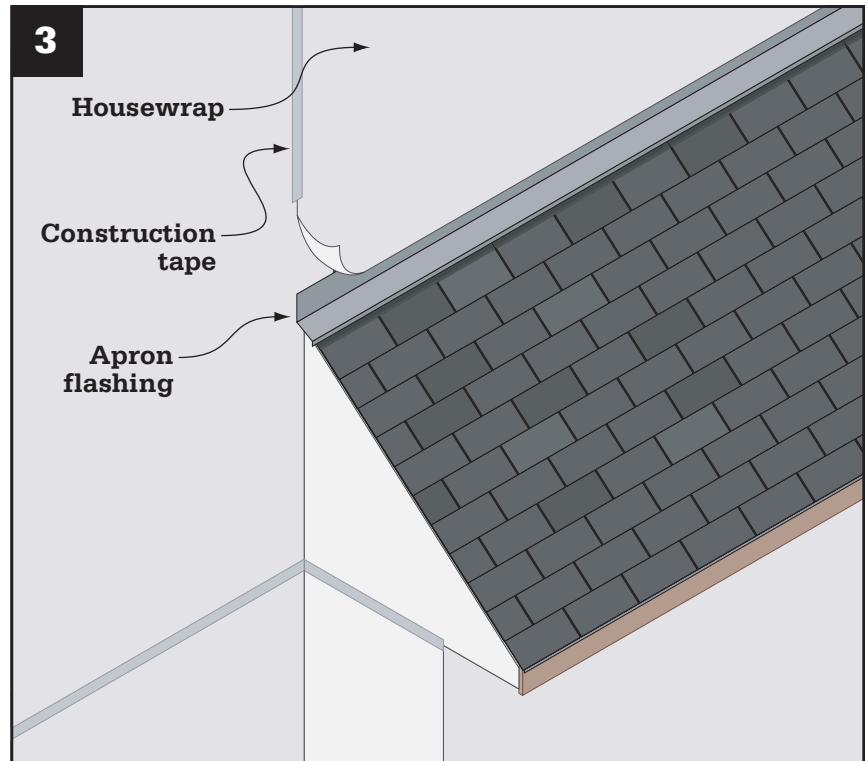


NOTES _____

Install a weep screed, layering it over the apron flashing. The weep screed should be 1 1/2" above the horizontal face of the apron flashing.


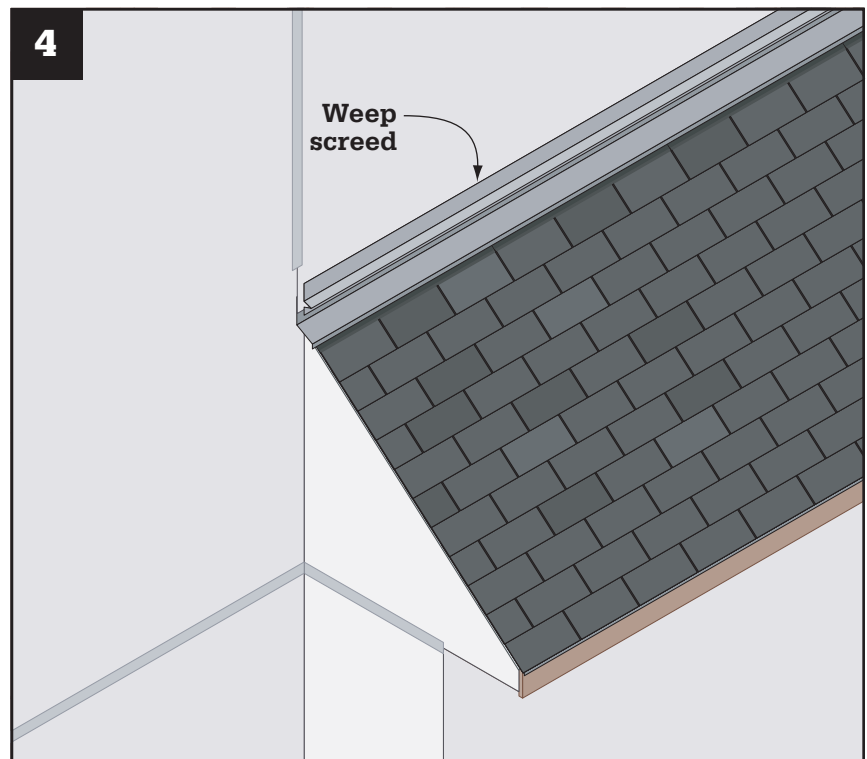


Install the building paper on the wall. The building paper should completely cover the weep screed flange.

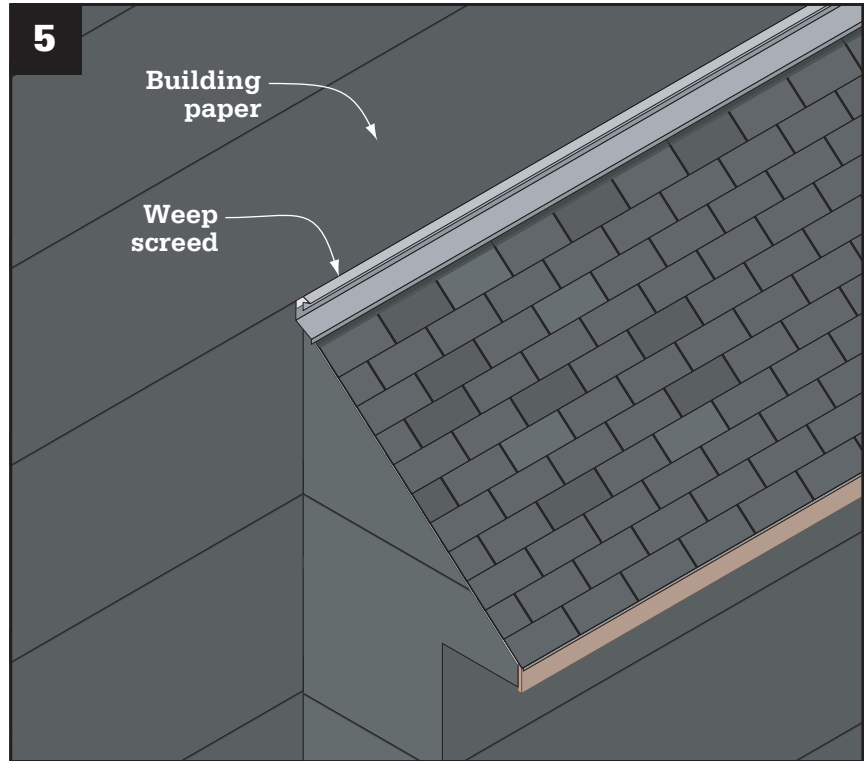


NOTES _____

Install the metal lath on the wall. The building paper should completely cover the weep screed flange.

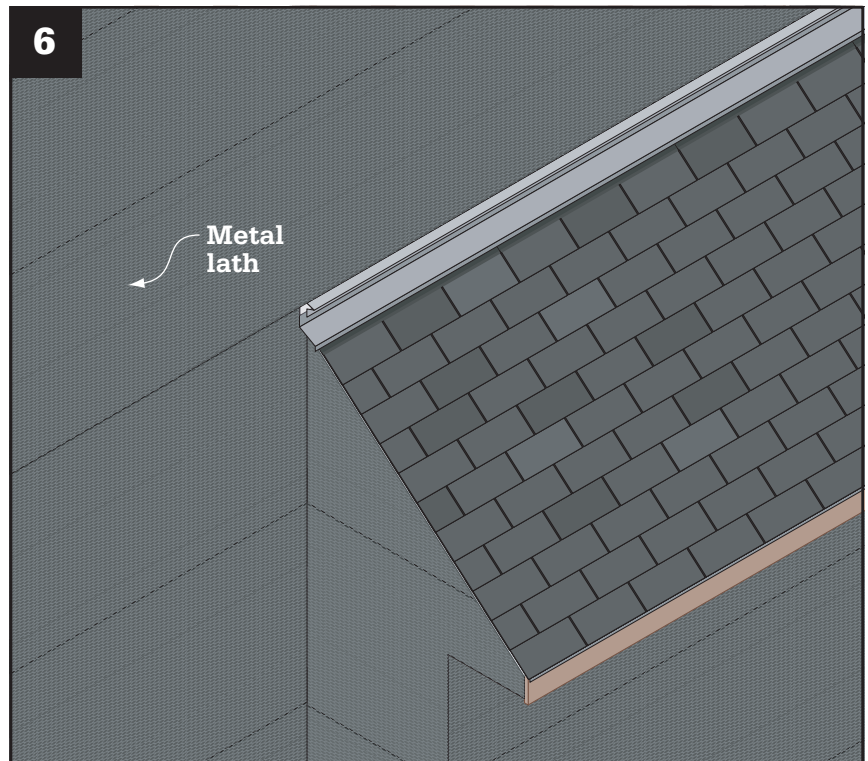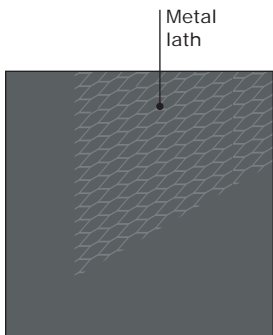

Apply the stucco system.

Pro Tip! Be sure to install gutters.

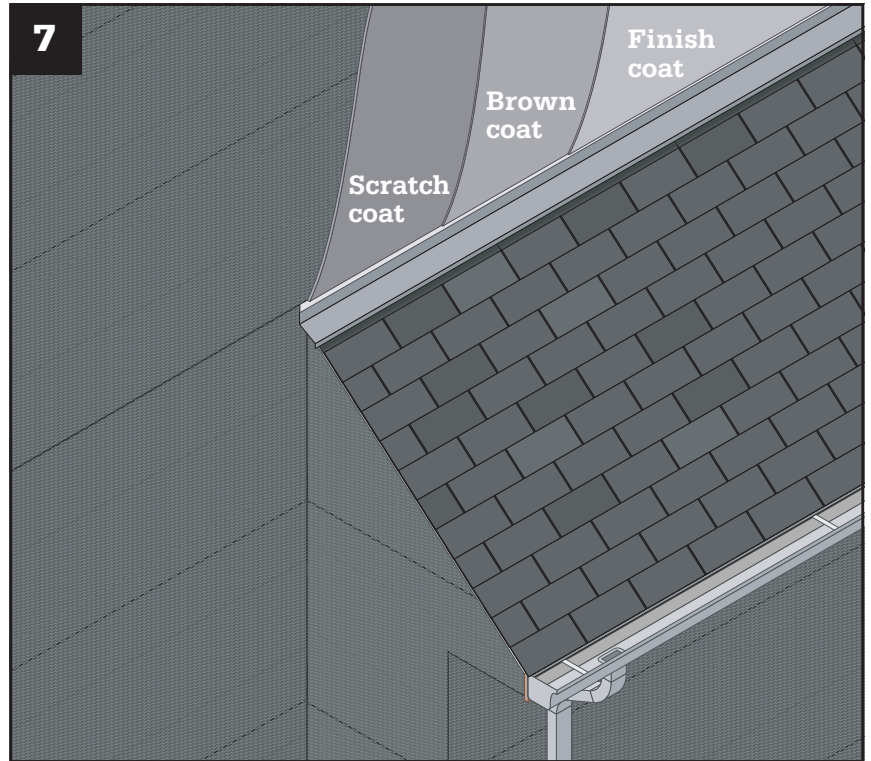

NOTES _____

